


3. MANUAL OPERATION

TOGGLE SWITCH - ION AND IMP SERIES

A toggle switch is located either in or outside the house. This switch is used to scroll through all the modes on the Illuminator.

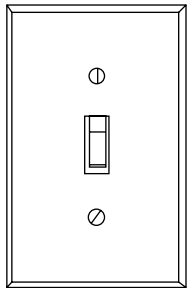

Typical toggle switch

Mode	1	2	3	4	5	6
Color	OFF	Color	Red	Green	Blue	Magenta

Mode	6	7	8
Color	White	Color Changing	Party Mode

Note: Modes 8-11 are customizable Playlist modes.

II. Off Mode

The lamp is “off” in mode 1. This mode cannot be reprogrammed.

III. Single Color Modes

There are seven single color modes on the illuminator. These modes store static colors (no color changing or fading) on the device. Default single colors are red, green, blue, cyan, magenta, and white in that order.

IV. Party Mode

The Illuminator also has a party mode on mode 8 by default. To use this mode, toggle the switch until you reach mode 8.

V. 1-2 Seconds (toggle Switch)

Toggles to the next color mode.

VI. 5-8 Seconds (toggle Switch)

The Illuminator defaults to its color changing mode.

VII. 10 Seconds and Up (toggle Switch)

The Illuminator defaults to its last programmed mode. It allows it to return to the same mode it was on originally in the event of a power failure or off-on cycling

